



Figure 1. Photo of Actual ATLS6A202D

### FEATURES

High Efficiency:  $\geq 90\%$

Constant Current Output

Maximum Output Current: 6A

Current Output Noise:  $8.29\mu A_{P-P}$  @ 0.1Hz-10Hz

High Stability:  $\pm 12mA@6A$  (0.2%) for entire temp. range

PWM Switching Frequency Synchronizable

Zero EMI

Compact Size

100 % Lead (Pb)-free and RoHS Compliant

DIP Package Available

### APPLICATIONS

Driving laser diodes with low noise, including DPSSL, EDFA, fiber laser, direct diode lasers, etc.

### DESCRIPTION

This laser driver is an electronic module designed for driving diode lasers with up to 6A constant current, high efficiency, low noise, high reliability, zero EMI, and small package. Figure 1 shows the photo of actual ATLS6A202D.

It provides these functions: laser constant current control, laser current monitoring, over current and thermal protection,

Table 1 Pin Function Descriptions

Pin #	Name	Type	Description
1	SDN	Digital Input	Shut down control. Negative logic, at the internal chip control input: $>1.4V$ = enable, $<0.95V$ = shut down, normal threshold voltage = 1.2V.
2	SYNC	Synchronization Input	The default internal switching frequency is 500kHz. This pin can be connected to an external clock signal of which the frequency should be about 10% to 15% higher than the default switching frequency. In this way, the driver will be switching at the same frequency with the external clock signal, eliminating beating interferences with other

switching frequency synchronization, laser diode status indication, soft start, and shut down.

It comes with a high stability low noise 2.5V voltage reference output which can be used for setting the output current. The reference output can also be used for the ADCs (Analog to Digital Converters) and/or DACs (Digital to Analog Converters) to monitor the laser output current and/or set laser output current respectively.

The frequency synchronization of this laser driver allows using an external digital signal to synchronize the internal PWM output stage of the laser driver, to eliminate frequency beating interferences between the laser drivers and other switch mode electronic circuits on the same PCB.

The external signal needs to be in the range of 520kHz to 800kHz.

If other frequency is needed, contact us, we may be able to adjust the internal PWM frequency for you. The default switching frequency of the internal PWM output stage is 500kHz.

**Warning:** This module can only be soldered manually on the board by using a solder iron of  $< 310^{\circ}C$  ( $590^{\circ}F$ ), never let the module go through a reflow oven process.

The ATLS6A202D is packaged in a 6 sided metal enclosure, which blocks EMIs (Electro-Magnetic Interferences) to prevent the driver and other electronics from interfering with each other.

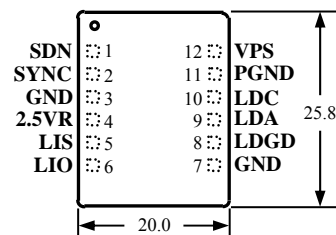


Figure 2. Pin Names and Locations

Figure 2 is the actual size top view of the ATLS6A202D, which shows the pin names and locations. Its thickness is 5.0mm.

The ATLS6A202D pin functions are shown in Table 1.



			switch mode power supplies, laser drivers, TEC controllers, etc. If other default switching frequency is needed, please contact us, it can be specified from 300kHz to 700kHz.
3, 7	GND	Signal Ground	Signal ground pin. Connect POT (potentiometer), ADCs and DACs grounds to here.
4	2.5VR	Analog Output	Reference voltage. It can source 3mA max., with $<5\mu\text{V}_{\text{p-p}}$ noise between 0.1 to 10Hz and $<25\text{ppm}/^\circ\text{C}$ (max.) stability.
5	LIS	Analog Input	Laser current setting voltage. There is an input resistor of 10M tied to GND on this port. Setting it from 0V to 2.5V will set the laser current from 0A to 6A linearly.
6	LIO	Analog Output	Laser current output indication. 0V to 2.5V indicates the laser current being from 0A to 6A linearly.
8	LDGD	Digital Output	Laser diode good indication. When this pin is high, $>2\text{V}$ , the control loop is working properly. When this pin is low, $<0.3\text{V}$ , the laser diode is bad, or there is a short or open circuit at the laser diode.
9	LDA	Analog Output	Laser diode anode. Connect it to the anode of the laser diode.
10	LDC	Analog Output	Laser diode cathode. Connect it to the cathode of the laser diode.
11	PGND	Power Ground	Power ground pin. Connect this pin directly to power supply return terminal.
12	VPS	Power Input	Power supply voltage. The driver works from $V_{\text{VPS}} = 3.0\text{V}$ to $5.5\text{V}$ .

**SPECIFICATIONS**Table 2 Characteristics ( $T_{\text{ambient}} = 25^\circ\text{C}$ )

Parameter	Value	Unit
Laser driver efficiency	$\geq 90$	%
Maximum output current	6	A
Current output noise ( $V_{\text{IN}} = 5\text{V}$ ; $V_{\text{OUT}} = 2.5\text{V}$ ; $I_{\text{OUT}} = 500\text{mA}$ )	8.29	$\mu\text{A}_{\text{p-p}} @$ 0.1Hz- 10Hz
Stability	$\pm 100$	$\text{ppm}/^\circ\text{C}$
Laser current control signal level	0 ~ 2.5	V
Control accuracy	$\pm 0.2$	%
Laser current indication signal level	0 ~ 2.5	V
Indication accuracy	$\pm 0.2$	%
Output reference voltage	2.5	V
Power supply voltage range	3.0 ~ 5.5	V
Operating case temperature	-40 ~ 125	$^\circ\text{C}$
Rise times of small signal	70	$\mu\text{S}$
Fall times of small signal	70	$\mu\text{S}$
Rise times of large signal	352	$\mu\text{S}$
Fall times of large signal	184	$\mu\text{S}$

**OPERATION PRINCIPLE**

The block diagram of the driver is shown in Figure 3. The shut down control circuit accepts signals from 3 sources: external shut down, over current and over temperature signals. When one of these signals is activated, the driver is shut down. Only when all these 3 signals go up, the soft start circuit starts enabling the low noise driver.

It comes with a laser diode status indication circuit. When LDGD pin is high,  $>2\text{V}$ , the control loop is working properly. When this pin is low,  $<0.3\text{V}$ , the laser diode is bad, or there is a short or open circuit at the laser diode.

The high stability low noise 2.5V voltage reference can be used for setting the output current by setting the voltage on this LIS pin, and also be used for the external ADCs and/or DACs as voltage references.

An internal soft start circuit allows a slow start up and a quick shut down for the laser control loop.

The current measurement circuit monitors the output current and sets the current indication voltage on the LIO pin. The over current protection circuit shuts down the driver upon detecting the output current exceeds the pre-set value.

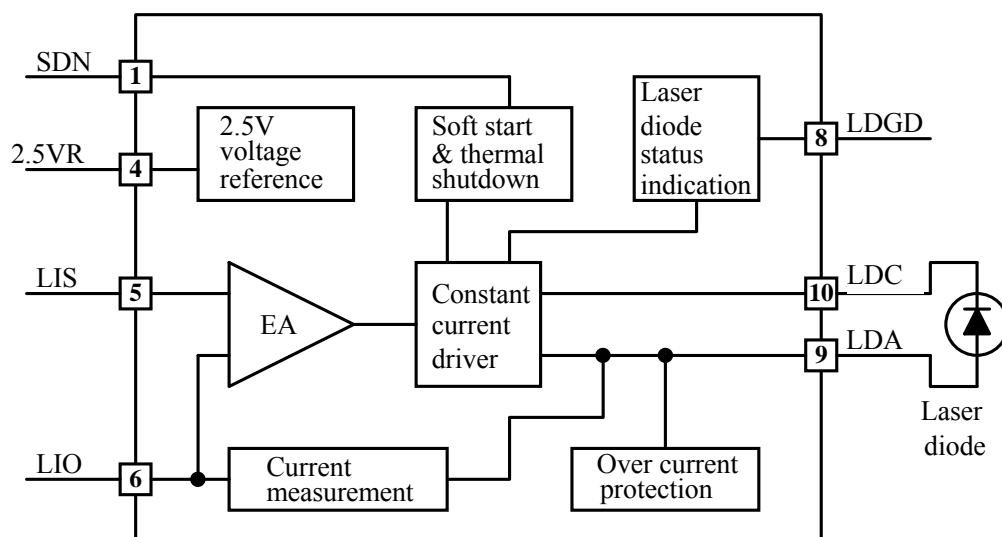


Figure 3. Block Diagram

## APPLICATION INFORMATION

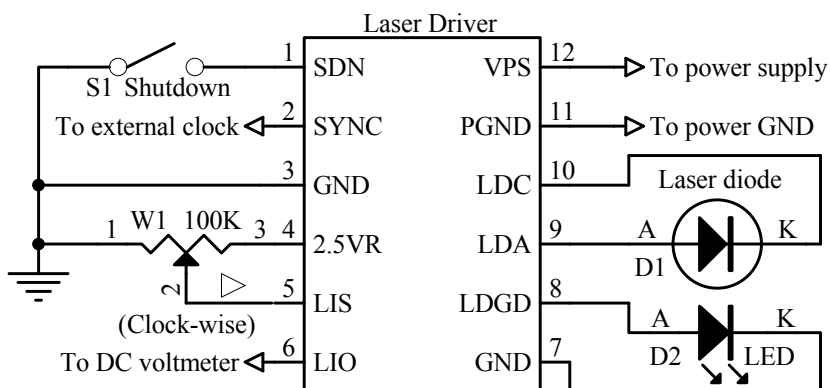


Figure 4. A Typical Stand-alone Application Schematic

Figure 4 shows a typical stand-alone application circuit.

The switch S1 is an external switch for shutting down or enabling the controller. When shorting SDN to ground, i.e. to close the switch S1, the controller is shut down; when leave the switch open, the internal pull up circuit pulls the SDN pin high and the controller is enabled. The internal logic threshold on the SDN pin is:  $>1.4V$  for enabling, and  $<0.95V$  for shutting down, normal threshold voltage is  $1.2V$ . The switch S1 can also be replaced by an electronic switch, such as an I/O pin of a micro-controller, an either open drain or push-pull output digital port, see Figure 5. If not using a switch to control the laser, leave the SDN pin unconnected.

The SYNC pin is for using an external signal to synchronize the internal switching frequency, to eliminate the beating interference between this laser controller and other switch mode power supply on the same PCB. If the SYNC is not connected, the default internal switching frequency is 500kHz. When using this pin, it must be

connected by an external clock signal of about 550kHz to 570kHz, about 10% to 15% higher than the default switching frequency of 500kHz. After using this function, the driver will be switching at the same frequency with the external clock signal, eliminating beating interferences. If other switching frequency is needed, please contact us, it can be specified from 300kHz to 700kHz.

In Figure 4, the potentiometer W1 is used to set the output current. Setting LIS from 0V to 2.5V will set the laser current from 0 to 6A linearly.

The laser diode D1 is connected between LDA and LDC pins. It is worth mentioning that the power supply return terminal should be connected to the pin 11, PGND, and the cathode of the laser diode should be connected to the pin 10, LDC. These 2 nodes should not be connected together externally, although they are connected together internally already by the driver circuit.

In Figure 4, the LED D2 is used to indicate laser diode status. When LDGD pin is high,  $>2V$ , the laser diode

control loop is working properly. When LDGD pin is low, <0.3V, the laser diode is bad, or there is a short or open circuit at the laser diode. The LDGD pin can also be connected to a digital input pin of a micro-controller, when

software/firmware is utilized in the system, see Figure 5. A typical micro-processor-based application circuit is shown in Figure 5.

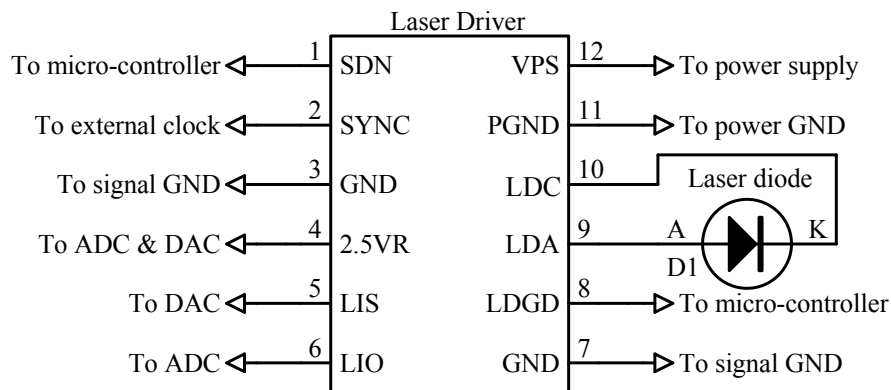


Figure 5. A Typical Micro-processor-based Application Schematic

### Turning the Driver On and Off

The driver can be turned on and off by setting the SDN pin high and lower respectively. It is recommended to turn the driver on by this sequence:

To turn on: turn on the power by providing the power supply voltage to the driver, turn on the driver by releasing the SDN pin.

To turn off: turn off the driver by lowering the voltage of SDN pin, turn off the power by stopping the voltage supply on the VPS pin.

When not controlling by the SDN pin: leave it unconnected and turn on and off the driver by the power supply.

### Adjusting the Output Current

The output current is set by adjusting W1, which sets input voltages of LIS, pin 5. See Figure 4.1 The output current will be:

$$I_{OUT} = 2.4 \times V_{LIS} \text{ (A)}.$$

LIS can also be set by using a DAC to replace the W1 in Figure 4.1. Make sure that the DAC has low output noise.

A RC low pass filtered can be inserted between the W1 output or the DAC output and the LIS pin, for lowering the output noise.

### Monitoring the Output Current

The output current of the driver can be monitored by measuring the voltage on the LIO pin. This feature is very useful for micro-driver based system where the ADC is available and monitoring the current in real time is required. This pin provides a very low noise voltage signal and is proportional to the output current:

$$I_{OUT} = 2.4 \times V_{LIO} \text{ (A)}.$$

For example, when the output signal is 2.5V, the output current is 6A.

LIO can be used to drive an ADC directly, and also be measured by a multi-meter.

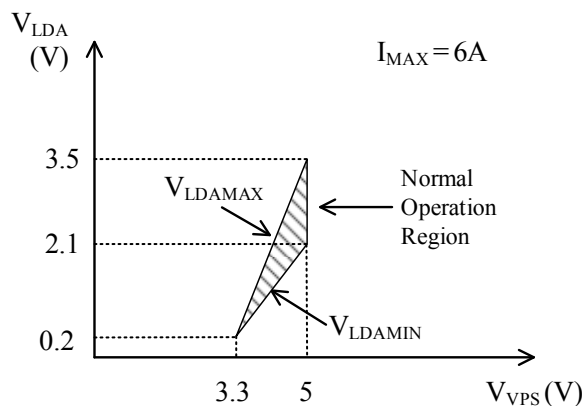


Figure 6.  $V_{VPS}$  &  $V_{LDA}$

### Driver Power Consumption

The power consumption of the driver can be calculated by:

$$P_{DRIVER} = I_{IN} \times V_{VPS} - I_{OUT} \times V_{LDA},$$

where  $I_{OUT}$  is the output current;

$I_{IN}$  is the power supply input current;

$V_{VPS}$  is the power supply voltage;

$V_{LDA}$  is the voltage across the laser diode;

$$\eta = I_{OUT} \times V_{LDA} / (I_{IN} \times V_{VPS}).$$

When the  $P_{DRIVER}$  exceeds 1W, a heat sink might be needed. The best way for arranging the heat sinking for the driver is as follows: transferring the heat by sandwiching a piece of

thermal conductive pad between the top metal surface of the laser driver and the internal metal surface of the final product as shown in Figure 7.1 and 7.2 below. The recommended thickness of the thermal conductive pad in Figure 7.1 is 1~4mm, and in Figure 7.2 is 0.5mm. ATI also provides a series of thermal conductive pads, click [here](#) for more information.

Another option is: reducing the power supply voltage  $V_{VPS}$ . We recommend using a power supply with its voltage barely higher than

$$1.2 \times V_{LDAMAX}.$$

where  $V_{LDAMAX}$  is the maximum possible laser diode voltage.

For example, for most diode lasers at 6A, the maximum forward voltage across the laser is about 2.7V, thus, use a 3.3V power supply is enough. Using a 3.3V power supply results in a much lower power consumption by the driver than using a 5V power supply.

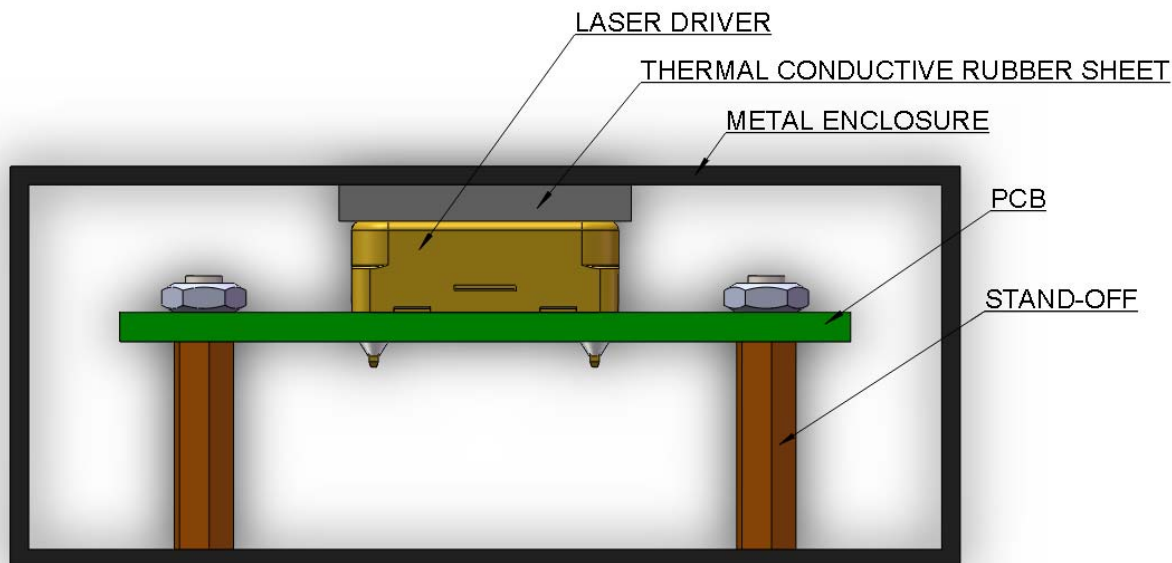


Figure 7.1 Transferring Heat with Metal Enclosure

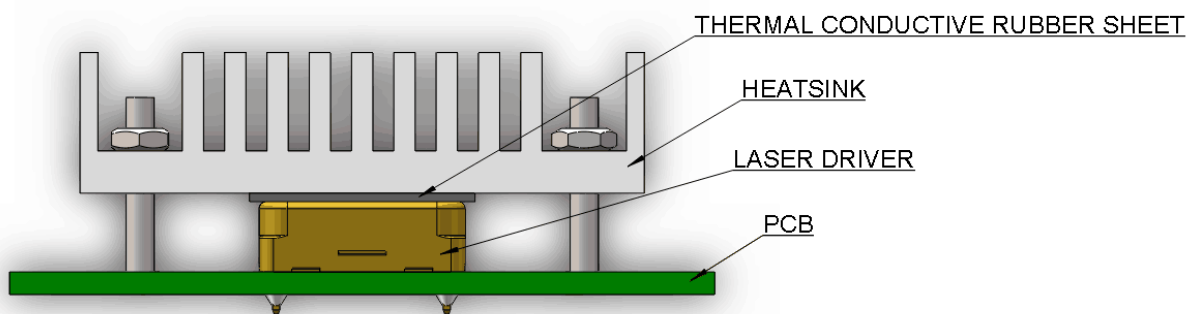


Figure 7.2 Transferring Heat with Heat Sink



#### First Time Power Up

Laser diode is a high value and vulnerable device. Faults in connections and damages done to the driver during soldering process may damage the laser diode permanently.

To protect the laser diode, it is highly recommend to use 3 to 4 regular diodes of  $>6A$  to form a “dummy laser” and insert it in the place of the real laser diode, when powering up the driver for the first time. Use an oscilloscope to monitor the LDA voltage at times of powering up and enabling the shutdown pin, and powering down the laser driver and turning off the shutdown pin, and make sure that there is not

over-shoot in output voltage at the LDA pin. At the same time, use an ammeter in series with the dummy laser, to make sure that the output current is correct.

After thorough checking and making sure free of faults in the system, disconnect the dummy laser diode and connect the real laser diode in place.

The driver output voltage range for the laser is between 0 to  $0.85 \times V_{VPS}$ .

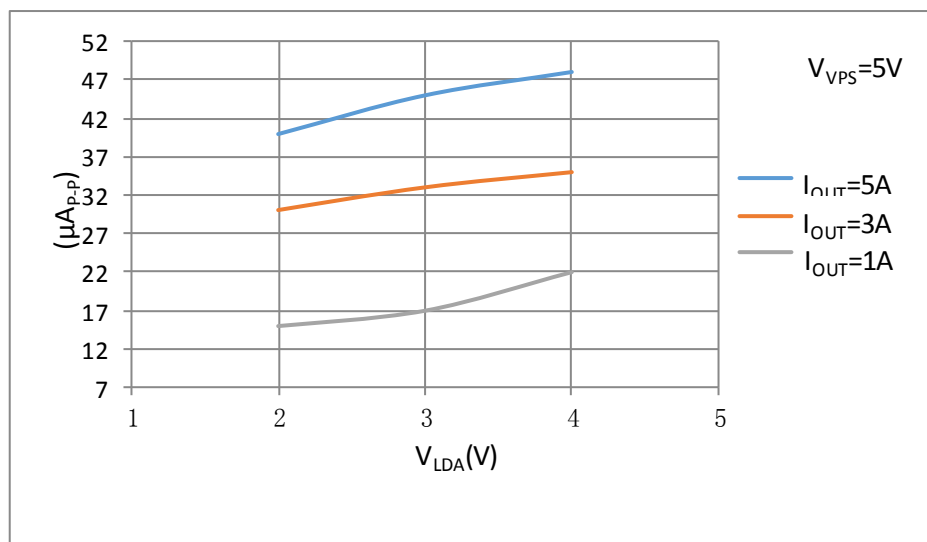


Figure 8.1.  $V_{LDA}$  vs. Output Current Noise@0.1Hz~10Hz

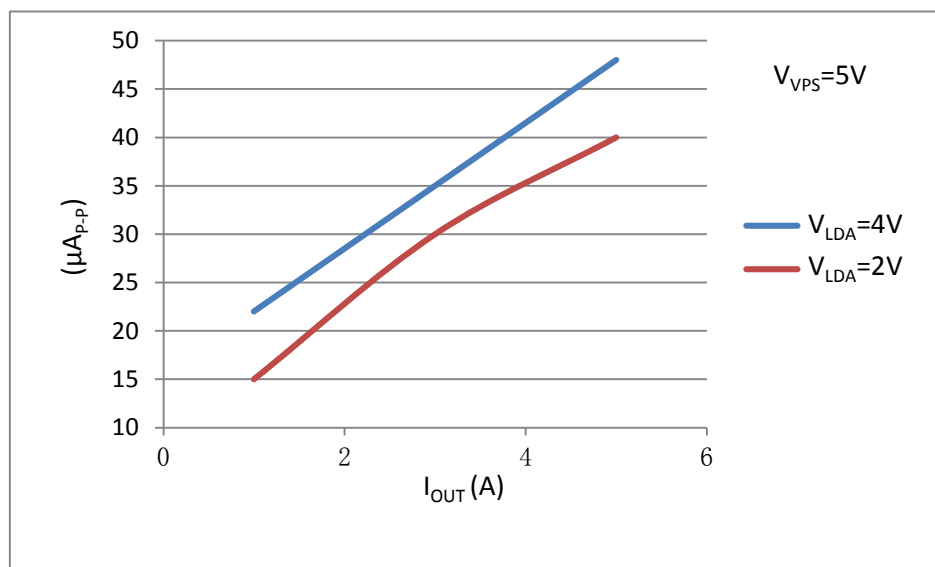


Figure 8.2.  $I_{OUT}$  vs. Output Current Noise@0.1Hz~10Hz



### OUTLINE DIMENSIONS AND MOUNTING

The driver comes in only one package: through hole mount, being often called DIP (Dual Inline Package) or D (short for DIP) package, and has a part number: ATLS6A202D. The dimensions of the DIP package driver are shown in Figure 9.

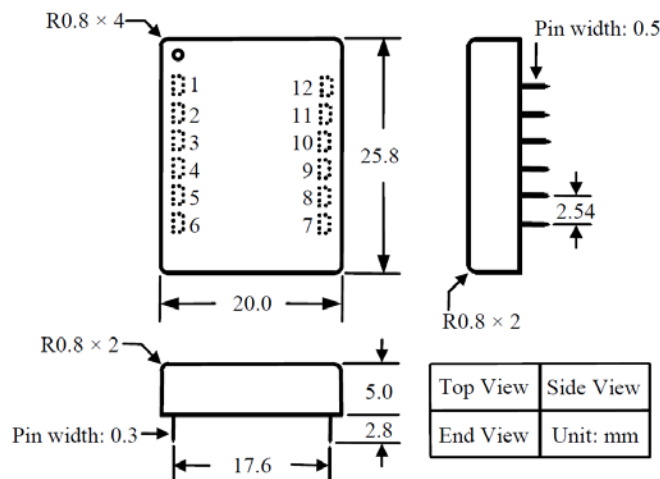


Figure 9. Dimensions of the DIP Package Driver

Figure 10 shows the top view PCB foot-print for mounting the laser driver.

“Tent” (i.e. cover the entire via by the solder mask layer) all the vias under the driver, otherwise, the vias can be shorted by the bottom plate of the driver which is internally connected the ground.

See Figure 10 and 11, it is recommended to use large copper fills for VPS, LDC, and the LDA pins, and other pins if possible, to decrease the thermal resistance between the module and the supporting PCB, to lower the module temperature.

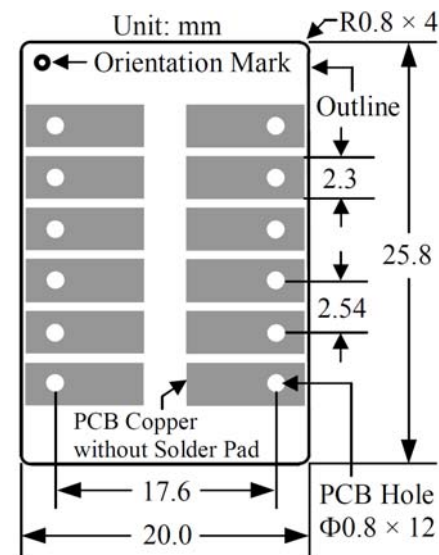


Figure 10. Top View of the PCB Foot-print

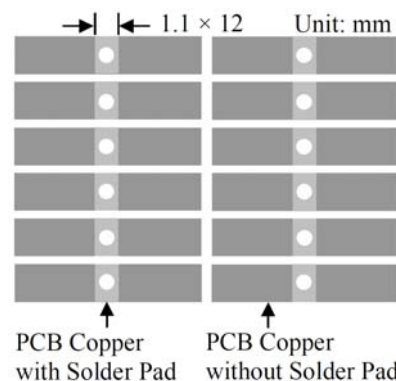


Figure 11. Top View of the Bottom Side PCB Foot-print

Figure 11 shows the top view of the bottom side PCB foot-print.

**WARNING:** This module can only be soldered manually on the board by using a solder iron of  $< 310^{\circ}\text{C}$  ( $590^{\circ}\text{F}$ ), never let the module go through a reflow oven process.

**NOTE:** The power supply may have overshoot, when happens, it may exceed the maximum allowed input voltage, 6V, of the controller and damage the controller permanently. To avoid this from happening, do the following:

1. Connect the controller solid well with the power supply before turning on the power.
2. Make sure that the power supply has sufficient output current. It is suggested that the power supply can supply 1.2 to 1.5 times the maximum current the controller requires.
3. When using a bench top power supply, set the current limit to  $>1.5$  times higher than the maximum current the controller requires.



#### ORDERING INFORMATION

Table 3 Part Number

Part Number	Description
ATLS6A202D	6A constant current driver in DIP package

#### PRICES

Table 4. Unit Price

Quantity	1 – 9pcs	10 – 49pcs	50 – 199pcs	200-499pcs	≥500pcs
ATLS6A202D	\$83.0	\$80.4	\$75.8	\$71.2	\$66.6

#### NOTICE

- ATI warrants performance of its products for one year to the specifications applicable at the time of sale, except for those being damaged by excessive abuse. Products found not meeting the specifications within one year from the date of sale can be exchanged free of charge.
- ATI reserves the right to make changes to its products or to discontinue any product or service without notice, and advise customers to obtain the latest version of relevant information to verify, before placing orders, that information being relied on is current and complete.
- All products are sold subject to the terms and conditions of sale supplied at the time of order acknowledgment, including those pertaining to warranty, patent infringement, and limitation of liability. Testing and other quality control techniques are utilized to the extent ATI deems necessary to support this warranty. Specific testing of all parameters of each device is not necessarily performed, except those mandated by government requirements.
- Customers are responsible for their applications using ATI components. In order to minimize risks associated with the customers' applications, adequate design and operating safeguards must be provided by the customers to minimize inherent or procedural hazards. ATI assumes no liability for applications assistance or customer product design.
- ATI does not warrant or represent that any license, either express or implied, is granted under any patent right, copyright, mask work right, or other intellectual property right of ATI covering or relating to any combination, machine, or process in which such products or services might be or are used. ATI's publication of information regarding any third party's products or services does not constitute ATI's approval, warranty or endorsement thereof.
- IP (Intellectual Property) Ownership: ATI retains the ownership of full rights for special technologies and/or techniques embedded in its products, the designs for mechanics, optics, plus all modifications, improvements, and inventions made by ATI for its products and/or projects.